


4.12 Replacement of SD-card memory in computer unit

Location

The location and orientation of the SD-card memory is shown by the following illustration.

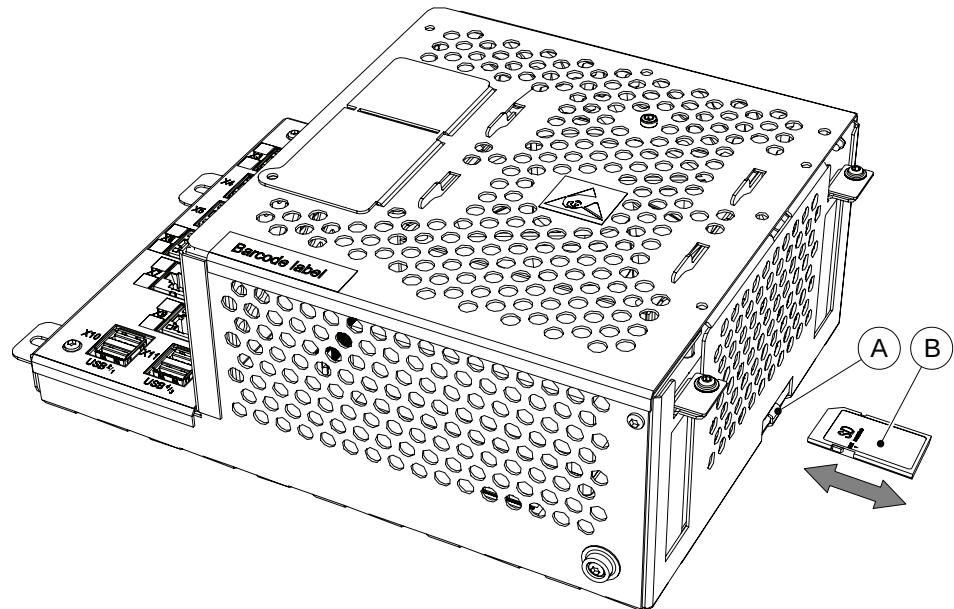

xx1300000807

A	Slot for SD-card memory
B	SD-card memory



Note

Only use SD-card memory supplied by ABB.



Note

The SD-card from the computer unit DSQC1018 cannot be used in the computer unit DSQC1024/DSQC1094. Use the backup and restore function to move data from DSQC1018 to DSQC1024/DSQC1094.




CAUTION

Reformatting the SD-card or modifying the disk partition can cause irreparable boot-up problems.

Continues on next page

Computer unit parts

The illustration below shows the placement of the computer unit parts in the recommended spare part list.

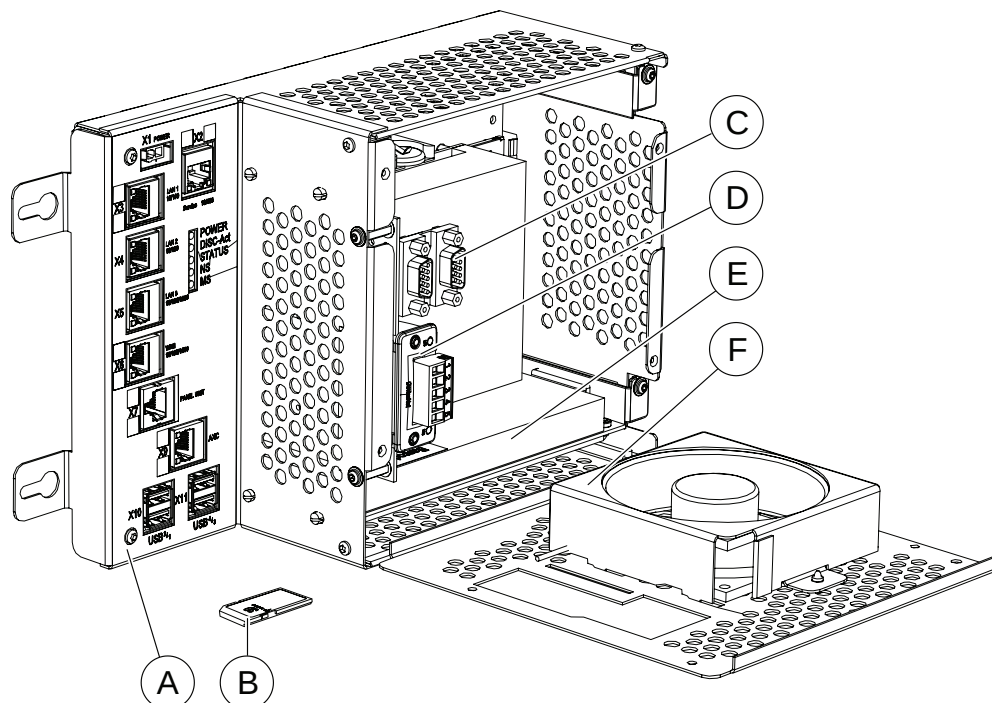

xx1300000851

	Spare part no.	Description	Type
A	3HAC042766-001	Computer unit (1 PCI slot)	DSQC1000
A	3HAC050363-001	Computer unit (2 PCI slots)	DSQC1018
A	3HAC058366-001	Computer unit (2 PCI slots) Recommended for RobotWare 6.08 and later versions.	DSQC1024
A	3HAC087348-001	Computer unit (2 PCI slots) Recommended for RobotWare 6.15 and later versions.  Note Previous revisions might be supported. Contact your local ABB office for information.	DSQC1094
B	3HAC061416-003	SD card	Used with computer DSQC1000, DSQC1018, DSQC1024, DSQC1094
C	3HAC046408-001	Expansion Board complete	DSQC1003
D	3HAC031670-001	PROFINET Slave Fieldbus Adapter	DSQC 688
D	3HAC026840-001	PROFIBUS Slave Fieldbus Adapter	DSQC 667
D	3HAC027652-001	Ethernet/IP Slave Fieldbus Adapter	DSQC 669

Continues on next page