
**User's
Manual**

**ProSafe-RS
ProSafe-RS Lite**

**ProSafe-RS
Hardware Document Guide**

**ProSafe-RS
ハードウェアドキュメントガイド**

IM 32P06S10-01Z1

Table List of User's Manuals 8—Node Unit

Product Model	Product Name	Document No. (*1)	Document Title
S2NN30D	Node Interface Unit	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
SNB10D	Safety Node Unit	For Release 3 IM 32Q06C10-31E	For Release 3 Safety Control Stations (Hardware)
SDCV01	Dummy Cover		
SNT10D	Unit for Optical Bus Repeater Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
L1NB10D	Safety Node Unit	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
L1DCV01	Dummy Cover		
L1NT10D	Unit for Optical Bus Repeater Module		

*1: The "EN" and "E" in the document number are the language code.

Table List of User's Manuals 9—Bus Interface Module

Product Model	Product Name	Document No. (*1)	Document Title
S2EN402	N-ESB Bus Coupler Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
S2EN404	N-ESB Bus Coupler Module		
SEC402	ESB Bus Coupler Module	For Release 3 IM 32Q06C10-31E	For Release 3 Safety Control Stations (Hardware)
SEC401	ESB Bus Coupler Module		
SNT411	Optical ESB Bus Repeater Master Module		
SNT511	Optical ESB Bus Repeater Slave Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
SNT401	Optical ESB Bus Repeater Master Module		
SNT501	Optical ESB Bus Repeater Slave Module	Refer to GS (*2)	-
SNT421	Optical ESB Bus Repeater Master Module		
SNT521	Optical ESB Bus Repeater Slave Module		
L1EC402	ESB Bus Coupler Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
L1EC401	ESB Bus Coupler Module		
L1NT411	Optical ESB Bus Repeater Master Module		
L1NT511	Optical ESB Bus Repeater Slave Module		
L1NT401	Optical ESB Bus Repeater Master Module		
L1NT501	Optical ESB Bus Repeater Slave Module		

*1: The "EN" and "E" in the document number are the language code.

*2: You can find the document No. for these products in the list of general specifications (GS) in section 1.4.

Table List of User's Manuals 10—I/O Module

Product Model	Product Name	Document No. (*1)	Document Title
SAI143	Analog Input Module	For Release 3 IM 32Q06C10-31E For Release 4 IM 32P06C10-01EN	For Release 3 Safety Control Stations (Hardware) For Release 4 Hardware User's Guide
SAV144	Analog Input Module		
SAT145	TC/mV Input Module		
SAR145	RTD Input Module		
SAI533	Analog Output Module		
SDV144	Digital Input Module		
SDV531	Digital Output Module		
SDV541	Digital Output Module		
SDV521	Digital Output Module		
SDV526	Digital Output Module		
SDV53A	Digital Output Module		
SCB100	Wiring Check Adapter for Digital Input		
SCB110	Wiring Check Adapter for Digital Input		
SCCC01	Connector Cover for MIL Cable		
SCCC02	Connector Cover for MIL Cable		
ALR111	Serial Communication Module		
ALR121	Serial Communication Module		
ALE111	Ethernet Communication Module		
S2LP131	Fire and Gas Communication Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
L1AI143	Analog Input Module		
L1AV144	Analog Input Module		
L1AT145	TC/mV Input Module		
L1AR145	RTD Input Module		
L1AI533	Analog Output Module		
L1DV144	Digital Input Module		
L1DV531	Digital Output Module		
L1DV541	Digital Output Module		
L1DV521	Digital Output Module		
L1DV526	Digital Output Module		
L1DV53A	Digital Output Module		
L1CCC01	Connector Cover for MIL Cable		
L1CCC02	Connector Cover for MIL Cable		

*1: The "EN" and "E" in the document number are the language code.

Table List of User's Manuals 17—Spare parts

Product Model	Product Name	Document No. (*1)	Document Title
S2EN501	N-ESB Bus Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
S2PW503	24V DC Output Power Supply Unit		
S2PW504	24V DC Output Power Supply Unit		
VC401	Vnet Coupler Module	For Release 3,4 IM 33J01S10-01Z1	For Release 3,4 CENTUM VP Hardware Document Guide
VI451	Communication Module for Vnet Router		
SSB401	ESB Bus Interface Module	For Release 3 IM 32Q06C10-31E	For Release 3 Safety Control Stations (Hardware) For Release 4 Hardware User's Guide
SPW481	100-120V AC Input Power Supply Module		
SPW482	220-240V AC Input Power Supply Module		
SPW484	24V DC Input Power Supply Module		
AIP602	Fan Unit		
SCP461	Processor Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
SCP451	Processor Module		
S2CP471	Processor Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
S2CP471KT	Processor Module Upgrade Kit	Refer to GS (*2)	-
L1CP471	Processor Module	For Release 4 IM 32P06C10-01EN	For Release 4 Hardware User's Guide
L1SB401	ESB Bus Interface Module		
L1PW481	100-120V AC Input Power Supply Module		
L1PW482	220-240V AC Input Power Supply Module		
L1PW484	24V DC Input Power Supply Module		

*1: The "EN", "E", and "Z1" in the document number are the language code.

*2: You can find the document No. for this product in the list of general specifications (GS) in section 1.4.