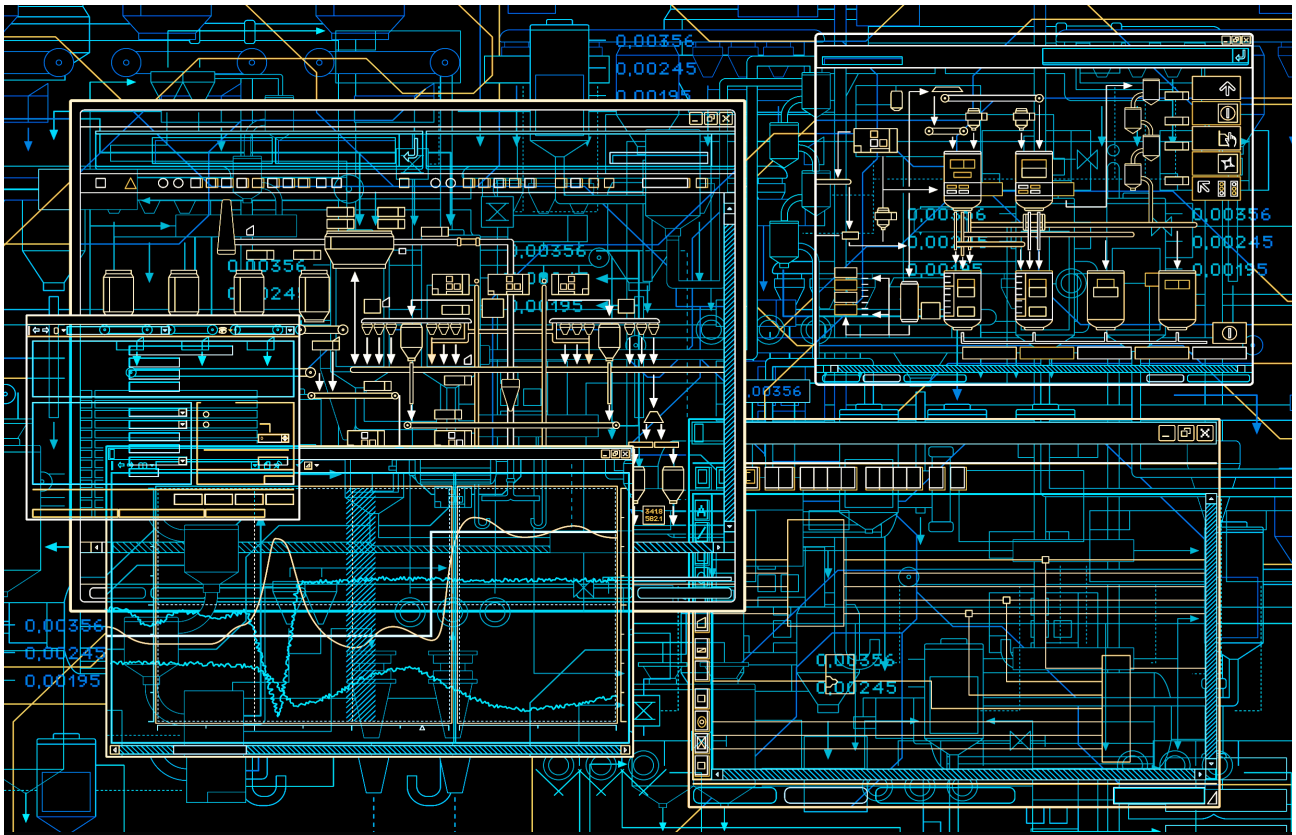


S200 I/O

Hardware

Power and productivity
for a better world™

Section 2 - System Configuration

I/O System Connection 27
Terminal Base and I/O Unit Configuration 28
Connecting the Power Supply Cables 29
Using 200-PS1.3 to Supply the Remote I/O System 30
Calculating the 24 V Supply to the I/O System 31

Section 3 - General Installation Instructions

Installation Precautions 33
Power Installation 34
Installation of Power-Line Filter for 24 V DC 39
Installation of External Cables 40
Recommended Cable Types 40
Connecting Power Supply Cables 40
Connecting Cables to Screw Terminals 41

Section 4 - Mounting Instructions

Rails and Profiles 43
Mounting the Terminal Bases 44
Removing a Terminal Base Unit 46
Mounting the Adapters 47
Checking the Basic (Internal) Mountings 48
Setting the Terminal Base Code Keys 49
Mounting the I/O Units 50
Mounting Cable 200-CE1 or 200-CE3 51
Mounting Cables when DIN Rails are Used 51
Mounting Cables when Mounting Profiles are Used 53

Section 5 - Functional Description

Terminal Base Unit Overview 55
Terminal Base Compatibility Cross Reference 56
Terminal Base Unit 200-TB2 58
Functional Description 59

Terminal Base Unit 200-TB3 61
Functional Description 62
Terminal Base Unit 200-TB3S 64
Functional Description 65
Terminal Base Unit 200-TB32 67
Functional Description 68
Terminal Base Unit 200-TB3T 70
Functional Description 71
Terminal Base Unit 200-TBN 74
Functional Description 75
Terminal Base Unit 200-TBNF 77
Functional Description 78
Digital Input Unit 200-IB16 80
Front Panel 80
Functional Description 80
200-IB16 Connections 82
Digital Output Unit 200-OB16 84
Front Panel 84
Functional Description 85
200-OB16 Connections 86
Digital Output Unit 200-OB16P 88
Front Panel 88
Functional Description 89
200-OB16P Connections 90
Digital Input/Output Combo Unit 200-IB10xOB6 92
Front Panel 92
Functional Description 93
200-IB10xOB6 Connections 95
Digital Input Unit 200-IB32 97
Front Panel 97
Functional Description 98
200-IB32 Connections 99

Troubleshooting 200-IT8 260
Troubleshooting 200-IM8 261
Troubleshooting 200-OM8 261
Troubleshooting 200-IA8 262
Troubleshooting 200-OA8 263
Troubleshooting 200-OW8 264
Troubleshooting 200-OB8EP 265
Troubleshooting 200-ANN 266
Troubleshooting 200-ACN 268
Troubleshooting 200-AENTR 270
Troubleshooting 200-APB12 272


Appendix A - Technical Specifications

General Specifications 275
Terminal Base Unit 200-TB2 276
Terminal Base Unit 200-TB3 277
Terminal Base Unit 200-TB3S 278
Terminal Base Unit 200-TB32 279
Terminal Base Unit 200-TB3T 280
Terminal Base Unit 200-TBN 281
Terminal Base Unit 200-TBNF 282
Digital Input Unit 200-IB16 283
Digital Output Unit 200-OB16 285
Digital Output Unit 200-OB16P 287
Digital Input/Output Combo Unit 200-IB10xOB6 289
Digital Input Unit 200-IB32 291
Digital Output Unit 200-OB32P 293
Digital Input/Output Combo Unit 200-IB16xOB16P 295
Pulse Counter Unit 200-IP2 298
Frequency Counter Unit 200-IP4 300
Analog Input Unit 200-IE8 302
Analog Output Unit 200-OE4 304
Input/Output Analog Combo Unit 200-IE4xOE2 306

Analog Input Unit 200-IF4I....308
Analog Output Unit 200-OF4I....310
RTD Input Unit 200-IR8....312
RTD Input Unit 200-IR8R....315
Thermocouple Input Unit 200-IT8....318
AC Input Unit 200-IA8....321
AC Output Unit 200-OA8....323
AC Input Unit 200-IM8....325
AC Output Unit 200-OM8....328
Relay Output Unit 200-OW8....330
Short-Circuit-Proof Output Unit 200-OB8EP....333
Dummy Unit 200-DUTB....335
Adapter for Central I/O System 200-ANN....336
Adapter for Remote I/O System 200-ACN....337
Adapter for EtherNet/IP I/O System 200-AENTR....338
Adapter for ProfiBus 200-APB12....339
Adapter for Serial I/O bus 200-AIO....340
Power Supply Unit 200-PS1.3....341
I/O Accessories....343
- Cable 200-CE1....343
- Cable 200-CE3....343
- Cable TK210V005....344
- Cable TK210V010....344
- Cable TK210V025....344
- Mounting Profile MP990....345
- Mounting Profile MP890....345
- Mounting Profile MP590....345
- Clips....346


Appendix B - Recommended Components

- Power-Line Filters....347
- Grounding Devices....348
- Devices for Extended Noise Suppression....348

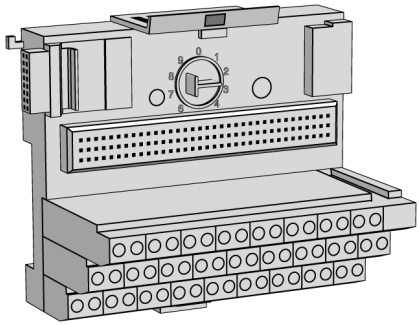


Terminal base units:

200-TB3, 200-TB2, 200-TBN etc.

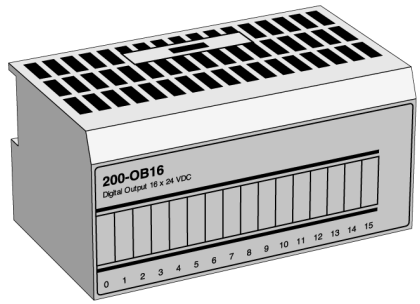


I/O units:

200-IB16, 200-OB16, 200-IE8, etc.

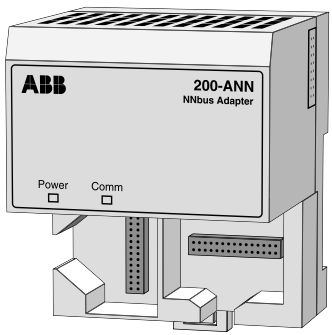


Adapter for central I/O:

200-ANN, 200-AIO

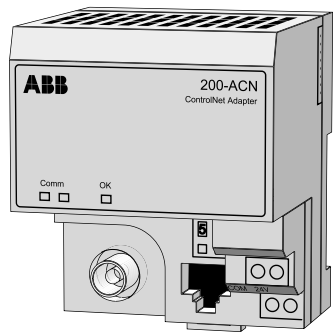


Adapters for remote I/O:

200-ACN, 200-APB12

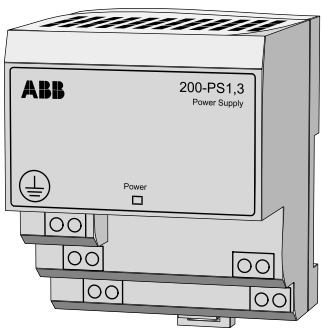

Power supply:

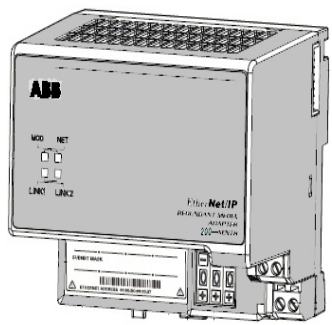

Adapters for EtherNetI/P:

200-AENTR

Figure 2. The basic components of the I/O system.

Connecting the Power Supply Cables

Connect a 24 V DC power supply to the I/O units requiring 24 V DC. Digital and analog I/O units should always be separated by a power-line filter, see Section 3, General Installation Instructions.

Separate wires can be used for each I/O unit or the wires can be chained if the total current for all I/O units does not exceed the maximum current for the cables or screw terminals. See figure.

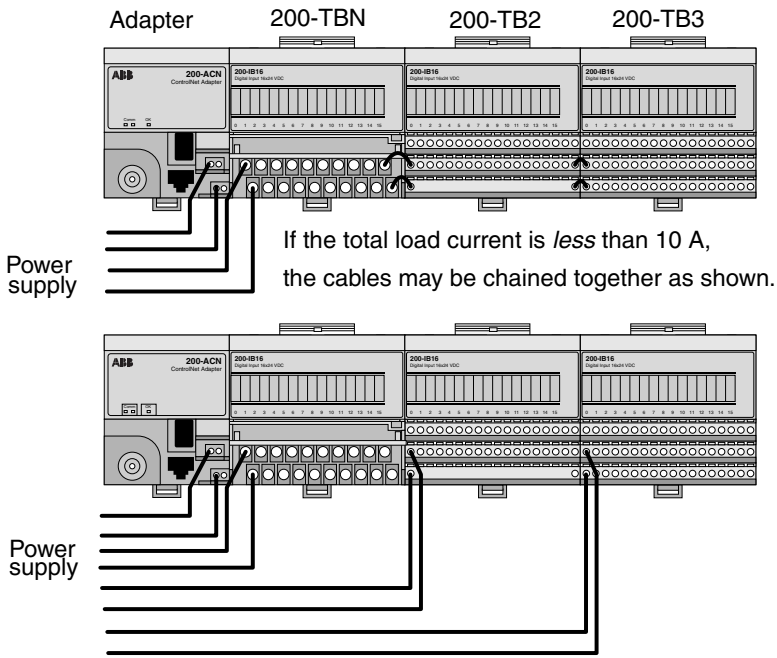


Figure 5. Chained and individual power supply.

Using 200-PS1.3 to Supply the Remote I/O System

If 200-PS1.3 is used to supply the remote I/O system the following applies.

Connecting the power supply cables

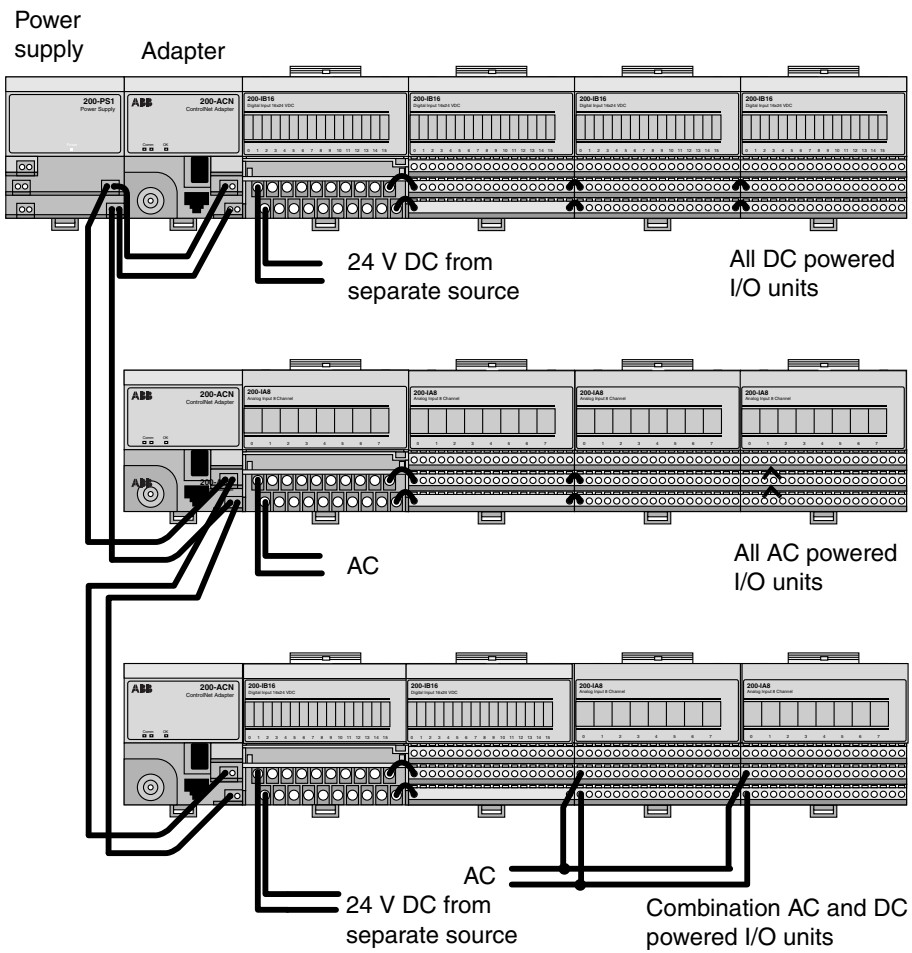


Figure 6. Example of using a 200-PS1.3 Power supply to power 3 adapters in a remote I/O system.

Section 5 Functional Description

This section describes the function of the terminal base units, I/O units and accessories. Remember to check that your controller software allows you to use the functions described.

Terminal Base Unit Overview

The following table shows which terminal base unit meet various application needs.

Terminal base unit	Purpose
200-TB2	Primarily intended for use with input units when using 2-wire inputs/outputs.
200-TB3	Primarily intended for use with input units when using 3-wire input proximity switches – can also be used with output units.
200-TB3S	A spring clamp version of the cage clamp 200-TB3 above – provides faster, simpler wire installation.
200-TB32	Required with the 200-IB32, 200-OB32P and 200-IB16xOB16P units.
200-TB3T	Required with the 200-IT8 unit – also provides chassis ground connections for the 200-IR8 and analog units.
200-TBN	Provides screw terminals to accept larger gauge wires plus cover for I/O wiring.
200-TBNF	Provides 8 5x20 mm fuses, screw terminals, plus a cover for I/O wiring – shipped with fuses for the 200-OA8 and 200-OM8 units, can be used for the 200-OW8 unit (see 200-OW8 installation instructions).