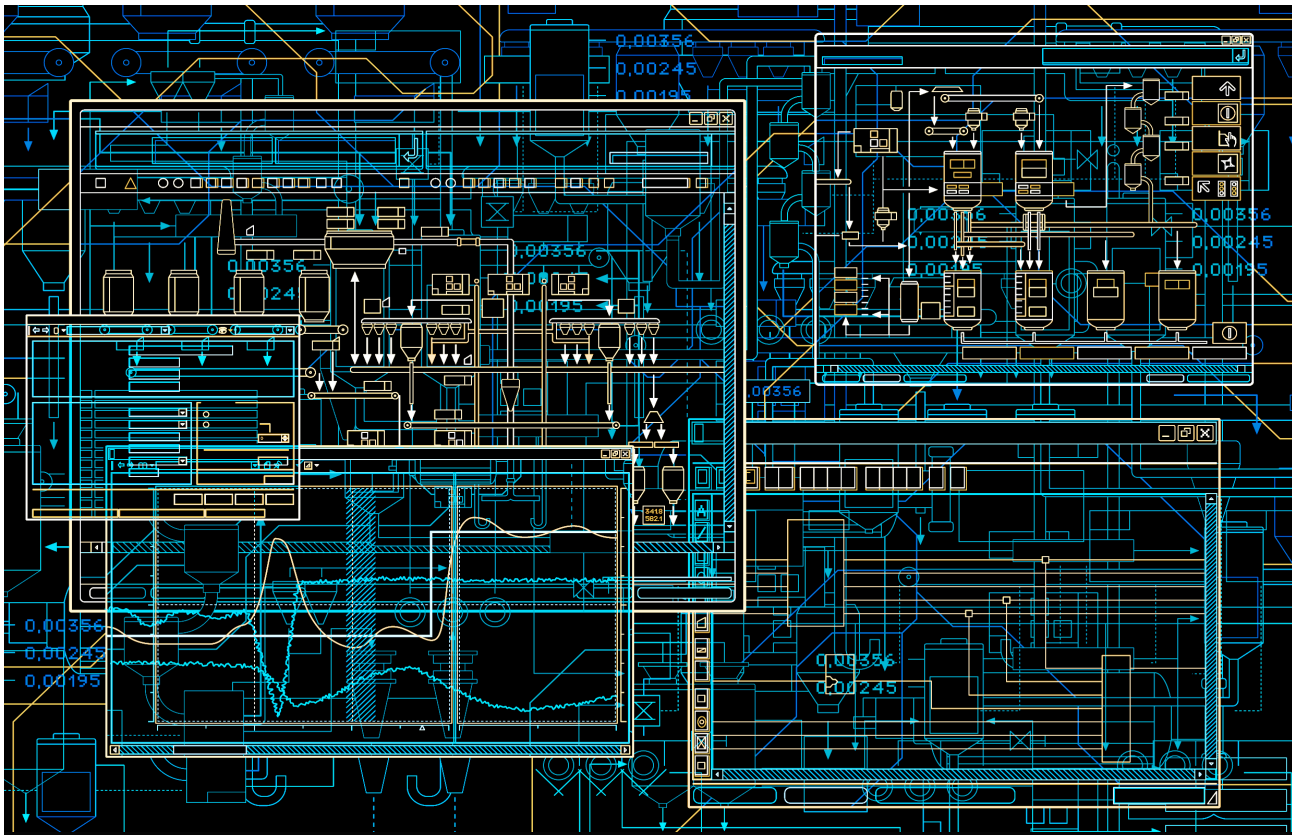


S200 I/O

Hardware

Power and productivity
for a better world™

Terminal Base Unit 200-TB3 61
Functional Description 62
Terminal Base Unit 200-TB3S 64
Functional Description 65
Terminal Base Unit 200-TB32 67
Functional Description 68
Terminal Base Unit 200-TB3T 70
Functional Description 71
Terminal Base Unit 200-TBN 74
Functional Description 75
Terminal Base Unit 200-TBNF 77
Functional Description 78
Digital Input Unit 200-IB16 80
Front Panel 80
Functional Description 80
200-IB16 Connections 82
Digital Output Unit 200-OB16 84
Front Panel 84
Functional Description 85
200-OB16 Connections 86
Digital Output Unit 200-OB16P 88
Front Panel 88
Functional Description 89
200-OB16P Connections 90
Digital Input/Output Combo Unit 200-IB10xOB6 92
Front Panel 92
Functional Description 93
200-IB10xOB6 Connections 95
Digital Input Unit 200-IB32 97
Front Panel 97
Functional Description 98
200-IB32 Connections 99

Digital Output Unit 200-OB32P 101
Functional Description 102
200-OB32P Connections 104
Digital Input/Output Combo Unit 200-IB16xOB16P 106
Front Panel 107
Functional Description 107
200-IB16xOB16P Connections 109
Pulse Counter Unit 200-IP2 111
Front Panel 111
Functional Description 112
200-IP2 Connections 124
Temperature Precautions 128
Frequency Counter Unit 200-IP4 130
Front Panel 130
Functional Description 132
200-IP4 Connections 138
Temperature Precautions 142
Analog Input Unit 200-IE8 143
Front Panel 143
Functional Description 143
200-IE8 Connections 145
Analog Output Unit 200-OE4 147
Front Panel 147
Functional Description 147
200-OE4 Connections 149
Input/Output Analog Combo Unit 200-IE4xOE2 151
Front Panel 151
Functional Description 151
200-IE4xOE2 Connections 153
Analog Input Unit 200-IF4I 155
Front Panel 155
Functional Description 156

Troubleshooting 200-IT8 260
Troubleshooting 200-IM8 261
Troubleshooting 200-OM8 261
Troubleshooting 200-IA8 262
Troubleshooting 200-OA8 263
Troubleshooting 200-OW8 264
Troubleshooting 200-OB8EP 265
Troubleshooting 200-ANN 266
Troubleshooting 200-ACN 268
Troubleshooting 200-AENTR 270
Troubleshooting 200-APB12 272

Appendix A - Technical Specifications

General Specifications 275
Terminal Base Unit 200-TB2 276
Terminal Base Unit 200-TB3 277
Terminal Base Unit 200-TB3S 278
Terminal Base Unit 200-TB32 279
Terminal Base Unit 200-TB3T 280
Terminal Base Unit 200-TBN 281
Terminal Base Unit 200-TBNF 282
Digital Input Unit 200-IB16 283
Digital Output Unit 200-OB16 285
Digital Output Unit 200-OB16P 287
Digital Input/Output Combo Unit 200-IB10xOB6 289
Digital Input Unit 200-IB32 291
Digital Output Unit 200-OB32P 293
Digital Input/Output Combo Unit 200-IB16xOB16P 295
Pulse Counter Unit 200-IP2 298
Frequency Counter Unit 200-IP4 300
Analog Input Unit 200-IE8 302
Analog Output Unit 200-OE4 304
Input/Output Analog Combo Unit 200-IE4xOE2 306

Analog Input Unit 200-IF4I....308
Analog Output Unit 200-OF4I....310
RTD Input Unit 200-IR8....312
RTD Input Unit 200-IR8R....315
Thermocouple Input Unit 200-IT8....318
AC Input Unit 200-IA8....321
AC Output Unit 200-OA8....323
AC Input Unit 200-IM8....325
AC Output Unit 200-OM8....328
Relay Output Unit 200-OW8....330
Short-Circuit-Proof Output Unit 200-OB8EP....333
Dummy Unit 200-DUTB....335
Adapter for Central I/O System 200-ANN....336
Adapter for Remote I/O System 200-ACN....337
Adapter for EtherNet/IP I/O System 200-AENTR....338
Adapter for ProfiBus 200-APB12....339
Adapter for Serial I/O bus 200-AIO....340
Power Supply Unit 200-PS1.3....341
I/O Accessories....343
- Cable 200-CE1....343
- Cable 200-CE3....343
- Cable TK210V005....344
- Cable TK210V010....344
- Cable TK210V025....344
- Mounting Profile MP990....345
- Mounting Profile MP890....345
- Mounting Profile MP590....345
- Clips....346

Appendix B - Recommended Components

- Power-Line Filters....347
- Grounding Devices....348
- Devices for Extended Noise Suppression....348

Section 5 Functional Description

This section describes the function of the terminal base units, I/O units and accessories. Remember to check that your controller software allows you to use the functions described.

Terminal Base Unit Overview

The following table shows which terminal base unit meet various application needs.

Terminal base unit	Purpose
200-TB2	Primarily intended for use with input units when using 2-wire inputs/outputs.
200-TB3	Primarily intended for use with input units when using 3-wire input proximity switches – can also be used with output units.
200-TB3S	A spring clamp version of the cage clamp 200-TB3 above – provides faster, simpler wire installation.
200-TB32	Required with the 200-IB32, 200-OB32P and 200-IB16xOB16P units.
200-TB3T	Required with the 200-IT8 unit – also provides chassis ground connections for the 200-IR8 and analog units.
200-TBN	Provides screw terminals to accept larger gauge wires plus cover for I/O wiring.
200-TBNF	Provides 8 5x20 mm fuses, screw terminals, plus a cover for I/O wiring – shipped with fuses for the 200-OA8 and 200-OM8 units, can be used for the 200-OW8 unit (see 200-OW8 installation instructions).

Terminal Base Compatibility Cross Reference

The following table lists the recommended terminal base unit(s) for each I/O unit.

I/O unit	Order code	Preferred terminal base	Compatible terminal base(s)
AC			
230 V AC	200-IM8	200-TBN	-
	200-OM8	200-TBNF	200-TBN
120 V AC	200-IA8	200-TBN	200-TB3 200-TB3S
	200-OA8	200-TBNF	200-TB3 200-TB3S 200-TBN
DC			
24 V DC	200-IB16	200-TB3	200-TB2 200-TB3S
	200-OB16 200-OB16P	200-TB2	200-TB3 200-TB3S
	200-IB10xOB6	200-TB3	200-TB3S
	200-IB32 200-OB32P 200-IB16xOB16P	200-TB32	
	200-OB8EP	200-TB2	200-TB3 200-TBN 200-TBNF
Relay			
Relay unit	200-OW8	200-TBNF	200-TB3 200-TB3S 200-TBN

I/O unit	Order code	Preferred terminal base	Compatible terminal base(s)
Counters			
24 V DC	200-IP2	200-TB3	200-TB3S 200-TB2
	200-IP4	200-TB3	200-TB3S 200-TB2
Analog			
24 V DC	200-IE8	200-TB3	200-TB3S
	200-OE4	200-TB3	200-TB3S 200-TBN 200-TBNF
	200-IE4xOE2	200-TB3	200-TB3S
Isolated analog			
24 V DC	200-IF4I	200-TB3	200-TB3S 200-TB3T 200-TBN
	200-OF4I	200-TB3	200-TB3S 200-TB3T 200-TBN
Speciality			
RTD Input unit	200-IR8	200-TB3	200-TB3S 200-TB3T
	200-IR8R	200-TB3T	200-TB3T
Thermocouple/mV Input unit	200-IT8	200-TB3T(1)	

(1) You can use a 200-TB3 for mV inputs only

Terminal Base Unit 200-TB2

This terminal base unit is intended for connecting an I/O unit and a number of two wire devices to the I/O system.

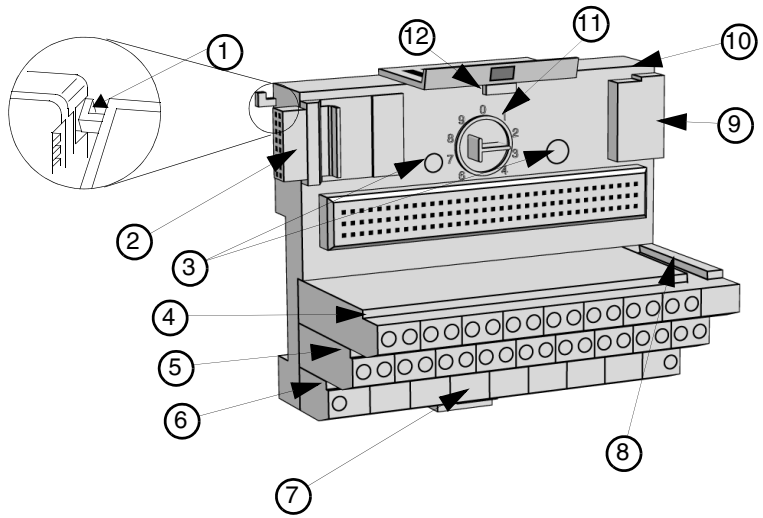


Figure 22. Terminal base unit 200-TB2

Component identification

1	Hook
2	Female I/O bus connector
3	Screw holes for panel mounting (Ø 4.5 mm), not used
4	Screw terminals for input/output connections
5	Screw terminals for input/output commons (0V DC)
6	Screw terminals for power connections (+24 V DC)
7	Locking tab for DIN rail mounting
8	Groove where the I/O unit guide rail fits
9	Male I/O bus connector
10	Slot for connection of an adjacent terminal base unit
11	Code key – set to the position required for the installed I/O unit

Terminal Base Unit 200-TB3S

This terminal base unit is intended for connecting an I/O unit and a number of two or three wire devices to the I/O system.

Note that the 200-TB3S is a spring clamp version of 200-TB3. All connections on 200-TB3S are spring clamps. Always use a screw driver when inserting the cable.

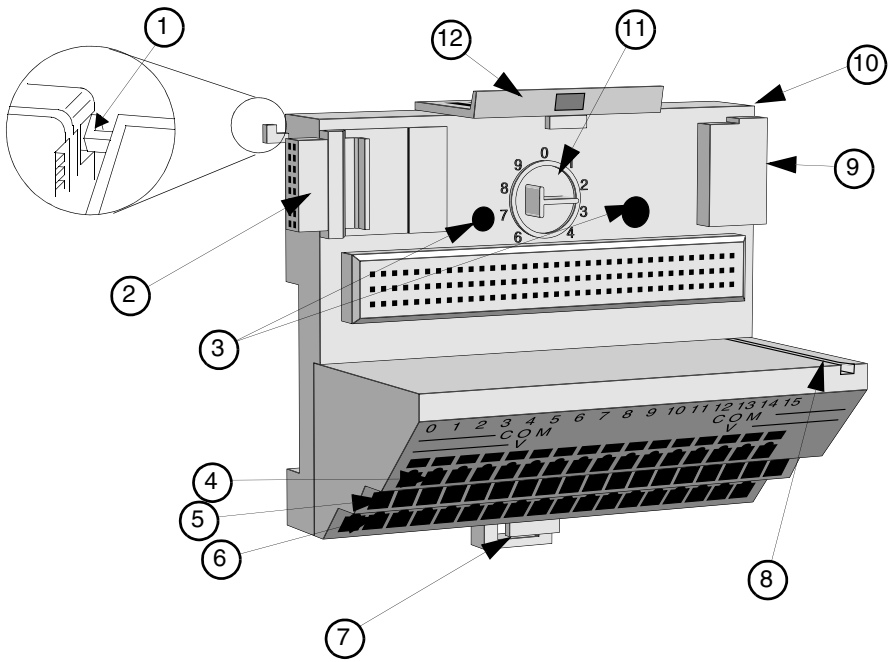


Figure 28. Terminal base unit 200-TB3S.

Component identification

1	Hook
2	Female I/O bus connector
3	Screw holes for panel mounting (Ø 4.5 mm), not used
4	Cage clamps for input/output connections
5	Cage clamps for input/output commons (0 V DC)